

## Solenoid Change

Fitting of a starter with a solenoid to a vehicle previously fitted with external solenoid starter.

The old solenoid becomes a starter relay. Useful for SNA016/7 to SNA001/3, SNL008 to SNL009

Lucas Inertia Starters M418G etc. to Pre-engaged SNL001/2/3 etc.

