


LED AMBER WARNING MODULE

Installation Instructions

LV9624A

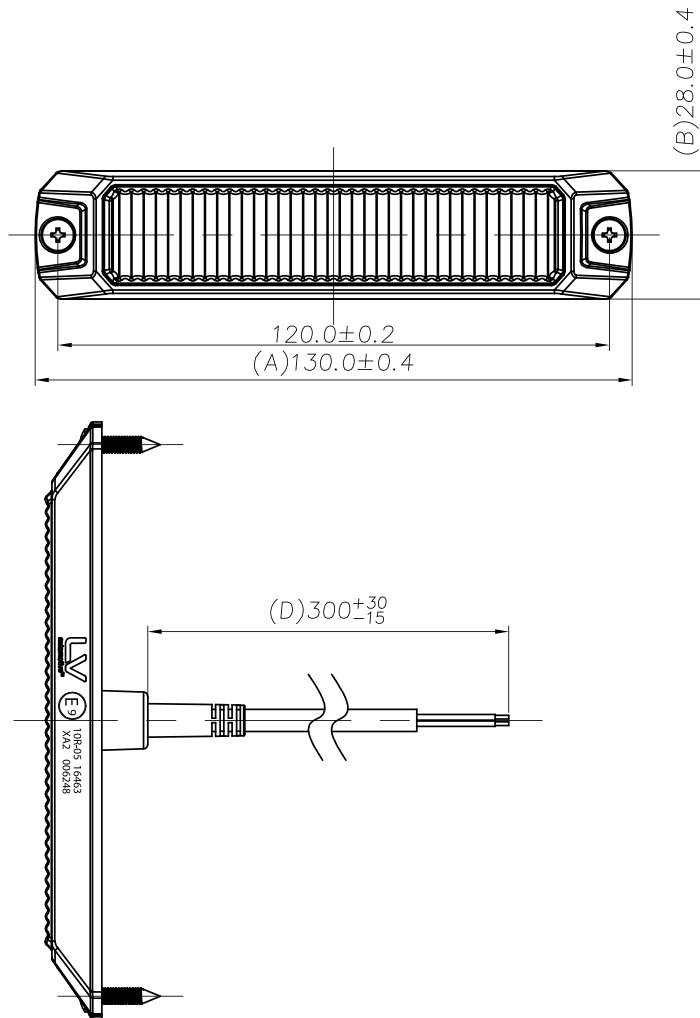

Wiring Code :

Black wire : (Earth) or (-) connection

Red wire : Battery / IGN or (+) connection

Green wire : (Pattern Change & Synchronize) :

Connect Green wire to Battery / IGN or (+) connection for pattern change

Connect Green wires of all modules together for synchronization.

White wire : (Simultaneous or Alternating flash) :

Connect White wires together when grouping of multiple warning module applications

Lamp operating range : 10-30 Volts

Please ensure this lamp is installed and operated by qualified personal only

LED AMBER WARNING MODULE

Installation Instructions

LV9624A

LV9620A / LV9624A: (Total 12 Patterns)

Pattern	Flash Mode	FPM	ms
1	Single Flash, ECE R65 Class 2 (by day)	125	480
2	Single Flash, ECE R65 Class 1 (by night)	125	480
3	Single Flash, California Title 13	75	800
4	Double Flash	125	480
5	Triple Flash	125	480
6	Quadruple Flash	125	480
7	Quintuple Flash	125	480
8	Combination Single / Double Flash	N/A	N/A
9	Combination Single / Triple Flash	N/A	N/A
10	Combination Single / Quintuple Flash	N/A	N/A
11	Strobe	600	100
12	Cruise (30% brightness by Day)	N/A	N/A

